 


Mayalit

INSTALLATION INSTRUCTIONS

Cimi Showcase Spotlight



To customers:

- Thank you for choosing our products !
- Please read this instruction carefully before using the product.
- This manual should be retained for the future reference.

Please confirm the following important matters before starting each work, in order to ensure safe construction!
If there is any problems with the product, please turn off the power supply and please consult our agent or ask qualified electrician.

⚠ Warning: Wrong using may cause accidents.

⚠ Caution: Incorrect using may cause damage.

Before Installation	<p>⚠ Warning</p> <p>Forbidden to use</p>	<p>This product is widely used in indoor application only and it cannot be used under the following environmental conditions. (Risk of Drop, Risk of Electric Shock, Risk of Fire)</p> <ul style="list-style-type: none"> ● Where ambient temperature is under -10°C or above 40°C ● Where air conditioner or air outlet exist ● Where ceilings that cannot bear the weight of fixture ● Where inclined and uneven ceiling exist ● Where fixture is exposed to direct sunlight ● Where dust and corrosive gas exist ● Where vibration and shock exist ● Outdoor Application ● Wet place where humidity is of $\geq 80\%$ PH ● Where building insulation may be present in normal use <p>Please contact Customers Service Team, once use environment cannot be confirmed to be applicable or not.</p>
During Installation	<p>⚠ Warning</p> <p>To be carried out</p>	<ul style="list-style-type: none"> ● The fixture should be installed by a electrician with relevant qualification certificate. (Risk of Safety Accident) ● The downlight needs an external LED power driver, and the power of the LED power driver should match the light source (recommended Use the company's corresponding LED power drive, otherwise it will affect the normal use of the lamp). ● The lighting circuit should be wired separately, compared with other power lines such as air conditioners or high-power electric equipments. ● Please make sure the power is switched off before installation or maintenance. And it's switched on only after correct wiring. ● (Risk of Electric Shock) ● Be sure that The minimum distance from side of the luminaire to surroundings must be more than 100mm. ● Don't disassemble or retrofit the fixture. (Risk of Electric Shock, Risk of Fire, Risk of Drop, Risk of Failure). ● Don't touch the fixture when it is working or in a high temperature condition when fixture just went out (Risk of Burning). ● Don't operate by wet hands (Risk of Electric Shock). ● Type 2 attachment method of attachment such that the flexible cable or cord cannot be replaced without destroying the integrity of the accessory.
	<p>⚠ Caution</p> <p>To be carried out</p>	<ul style="list-style-type: none"> ● The actual power is between 90%~110% from the rated power. (The load current carrying capacity of the wire should be considered in construction wiring.) ● The force bearing point of installation in the ceiling board must be 4 times higher than the fixture weight. (Risk of Drop or Damage) ● The fire regulations must be observed, when fixture is working. (Risk of Fire) ● Non replaceable light source: Light source of this fixture is not replaceable. When the light source reaches its end, the entire fixture should be replaced. ● Please cut off the power supply immediately, if smoke or odor occur. Then contact the electrical contractor. (Risk of Fire)

Places of use: hotels, villas, clubs, commercial complexes, shops, offices, office buildings and other indoor places.

HUIZHOU CDN INDUSTRIAL DEVELOPMENT CO., LTD.

No. A17, Xianghe West Rd., Dongjiang Ind. Zone, Shuikou, Huizhou, Guangdong, China
http://www.mayalit.com

Lighting Fixture Installation Instructions

1. Mounting thickness & bore size. (Figure 1)

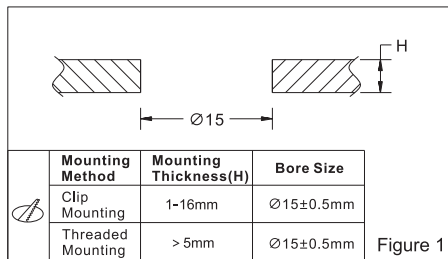 


Figure 1

Installation Method 1 (Nut Installation)

2. First, remove the fixing nut, thread the fixture through the pre-cut hole, then tighten the nut to secure. (Figure 2)

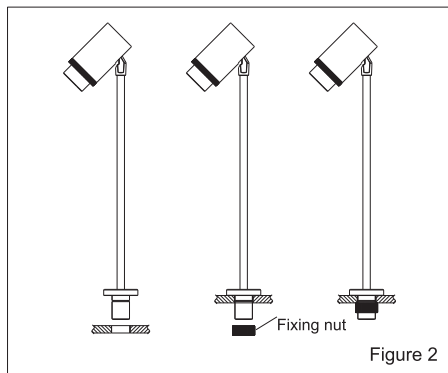 


Figure 2

Installation Method 2 (Screw Installation)

1. Remove the fixture's fixing assembly. Unscrew the end cap from the assembly, pass the assembly through the installation hole, secure it to the mounting surface with two screws, and finally screw the end cap back into place. (Figure 3)

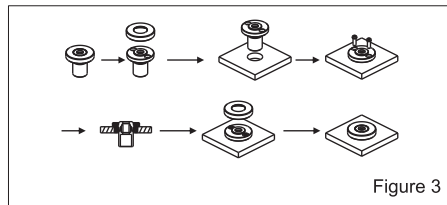 


Figure 3

2. Insert the luminaire input cable and pole successively into the holes of the mounting assembly. The pole allows 360° horizontal rotation and 30°-270° vertical tilt adjustment. (Figure 4)

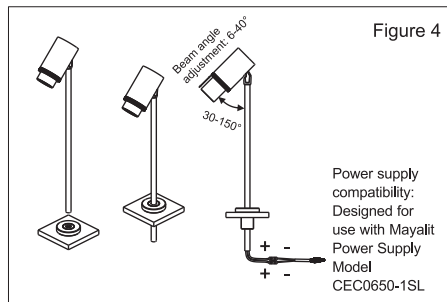 


Figure 4