


Mayalit

INSTALLATION INSTRUCTIONS

Imix Showcase Spotlight

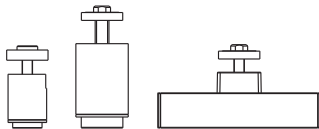

To customers:

- Thank you for choosing our products !
 - Please read this instruction carefully before using the product.
- This manual should be retained for the future reference.

Please confirm the following important matters before starting each work, in order to ensure safe construction!

If there is any problems with the product, please turn off the power supply and please consult our agent or ask qualified electrician.

⚠ Warning: Wrong using may cause accidents.

⚠ Caution: Incorrect using may cause damage.

Before Installation	⚠ Warning	Forbidden to use	<p>This product is widely used in indoor application only and it cannot be used under the following environmental conditions. (Risk of Drop, Risk of Electric Shock, Risk of Fire)</p> <ul style="list-style-type: none"> ● Where ambient temperature is under -10°C or above 40°C ● Where air conditioner or air outlet exist ● Where ceilings that cannot bear the weight of fixture ● Where inclined and uneven ceiling exist ● Where fixture is exposed to direct sunlight ● Where dust and corrosive gas exist ● Where vibration and shock exist ● Outdoor Application ● Wet place where humidity is of $\geq 80\%$ PH ● Where building insulation may be present in normal use <p>Please contact Customers Service Team once use environment cannot be confirmed to be applicable or not.</p>
During Installation	⚠ Warning	To be carried out	<ul style="list-style-type: none"> ● The fixture should be installed by a electrician with relevant qualification certificate. (Risk of Safety Accident) ● The downlight needs an external LED power driver, and the power of the LED power driver should match the light source (recommended Use the company's corresponding LED power drive, otherwise it will affect the normal use of the lamp). ● The lighting circuit should be wired separately compared with other power lines, such as air conditioners or high-power electric equipments. ● Please make sure the power is switched off before installation or maintenance. And it's switched on only after correct wiring. ● Type Z attachment method of attachment such that the flexible cable or cord cannot be replaced without destroying the integrity of the accessory. ● Don't disassemble or retrofit the fixture. (Risk of Electric Shock, Risk of Fire, Risk of Drop, Risk of Failure). ● Don't touch the fixture when it is working or in a high temperature condition when fixture just went out (Risk of Burning). ● Don't operate by wet hands (Risk of Electric Shock). ● Type Z attachment method of attachment such that the flexible cable or cord cannot be replaced without destroying the integrity of the accessory.
	⚠ Caution	To be carried out	<ul style="list-style-type: none"> ● The actual power is between 90%~110% from the rated power. (The load current carrying capacity of the wire should be considered in construction wiring.) ● The force bearing point of installation in the ceiling board must be 4 times higher than the fixture weight. (Risk of Drop or Damage) ● The fire regulations must be observed when fixture is working. (Risk of Fire) ● Non replaceable light source: Light source of this fixture is not replaceable. When the light source reaches its end, the entire fixture should be replaced. ● Please cut off the power supply immediately if smoke or odor occur, then contact the electrical contractor. (Risk of Fire)

Places of use: hotels, villas, clubs, commercial complexes, shops, offices, office buildings and other indoor places.

HUIZHOU CDN INDUSTRIAL DEVELOPMENT CO., LTD.

No. A17, Xianghe West Rd., Dongjiang Ind. Zone, Shuikou, Huizhou, Guangdong, China
http://www.mayalit.com

Luminaire Installation Instructions

1. Drill a $\Phi 15$ mm hole at the designated position on the mounting panel (dimensional tolerance: +3mm/0mm).
2. Remove the fixing plate from the end of the luminaire using pliers.
3. Position the fixing plate into the drilled hole and fasten it to the wooden board with self-tapping screws.
4. Insert the driver into the mounting panel, ensuring the DC female connector protrudes through the hole.
5. Tighten the DC male connector of the luminaire to the driver's female connector by clockwise rotation. Rotate the magnet until it fully engages with the fixing plate.
6. Connect the driver to power, activate the luminaire, and adjust its position for optimal illumination.

