


INSTALLATION INSTRUCTIONS

Mol LED Track Spotlight

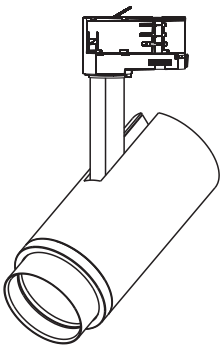

To customers:

- Thank you for choosing our products !
 - Please read this instruction carefully before using the product.
- This manual should be retained for the future reference.




Please confirm the following important matters before starting each work, in order to ensure safe construction!			
If there is any problems with the product, please turn off the power supply and please consult our agent or ask qualified electrician.			
<p>⚠ Warning: Wrong using may cause accidents.</p> <p>⚠ Caution: Incorrect using may cause damage.</p>			
Before Installation	Warning	Forbidden to use	<p>This product is widely used in indoor application only and it cannot be used under the following environmental conditions. (Risk of Drop, Risk of Electric Shock, Risk of Fire)</p> <ul style="list-style-type: none"> Where ambient temperature is under -10°C or above 45°C Where humidity >80%PH Where air conditioner or air outlet exist Where ceilings that cannot bear the weight of fixture Where inclined and uneven ceiling exist Where fixture is exposed to direct sunlight Where dust and corrosive gas exist Where vibration and shock exist Where building insulation may be present in normal use <p>● Outdoor Application</p> <p>Please contact Customers Service Team, once use environment cannot be confirmed to be applicable or not.</p>
During Installation	Warning	To be carried out	<ul style="list-style-type: none"> The fixture should be installed by a electrician with relevant qualification certificate. (Risk of Safety Accident) Do not exceed the access voltage: 220-240V, frequency 50/60Hz. The lighting circuit should be wired separately, compared with other power lines, such as air conditioners or high-power electric equipments. Please make sure the power is switched off before installation or maintenance. And it's switched on only after correct wiring. (Risk of Electric Shock). Don't disassemble or retrofit the fixture. (Risk of Electric Shock, Risk of Fire, Risk of Drop, Risk of Failure). Don't touch the fixture when it is working or in a high temperature condition, when fixture just went out (Risk of Burning). Don't operate by wet hands(Risk of Electric Shock).
	Caution	To be carried out	<ul style="list-style-type: none"> The actual power is between 90%~110% from the rated power. (The load current carrying capacity of the wire should be considered in construction wiring). The force bearing point of installation in the ceiling board must be 4 times higher than the fixture weight. (Risk of Drop or Damage) The fire regulations must be observed, when fixture is working. (Risk of Fire) Non-replaceable light sources: The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced. Please cut off the power supply immediately, if smoke or odor occur, then contact the electrical contractor. (Risk of Fire)

HUIZHOU CDN INDUSTRIAL DEVELOPMENT CO.,LTD.



No.A17,Xianghe West Rd., Dongjiang Ind.Zone,Shuikou, Huizhou, Guangdong, China
<http://www.mayalit.com>

Luminaire Installation Instructions

1. This product is compatible with Maya brand tracks (Figure 1) or other brands of compatible tracks. The specified track parameters are: input voltage: AC220~240V, maximum load current 16A.
2. Determine the installation plan for this product, ensuring sufficient minimum space without affecting house joists, water pipes, or other facilities.
3. Before installation, adjust handle 1 to the position shown in the diagram (Figure 2).
4. Align the protruding ribs on the side of the connector with the corresponding grooves on the track, then push the connector into the track slot (Figure 3).

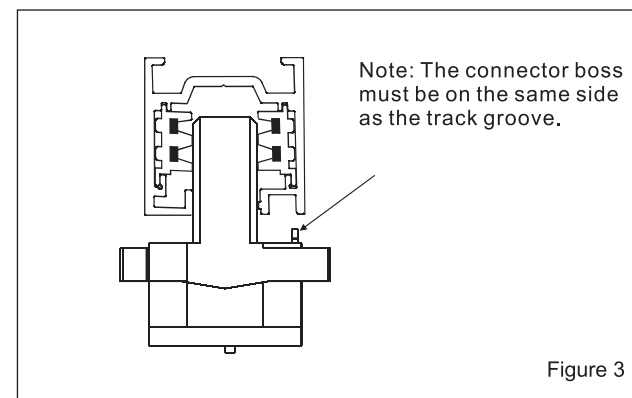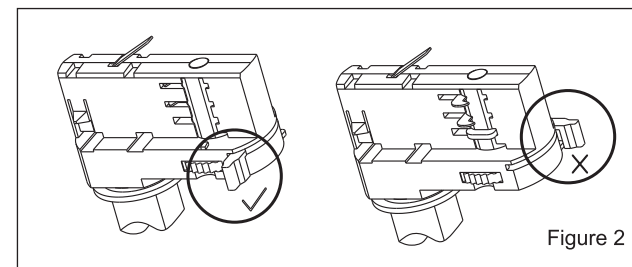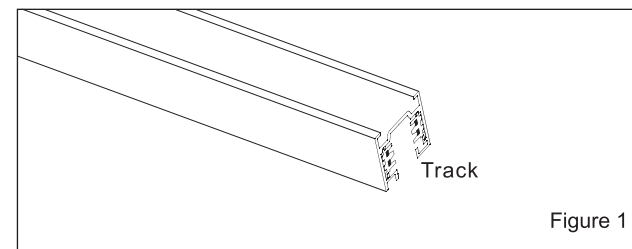

5. Rotate handle 1 counterclockwise to the locked position (Figure 4);
6. After the luminaire is installed, the lamp body can rotate 360° horizontally and 90° vertically (Figure 5);
7. This luminaire is focus-adjustable, with an adjustable angle ranging from 12° to 52° (Figure 5);

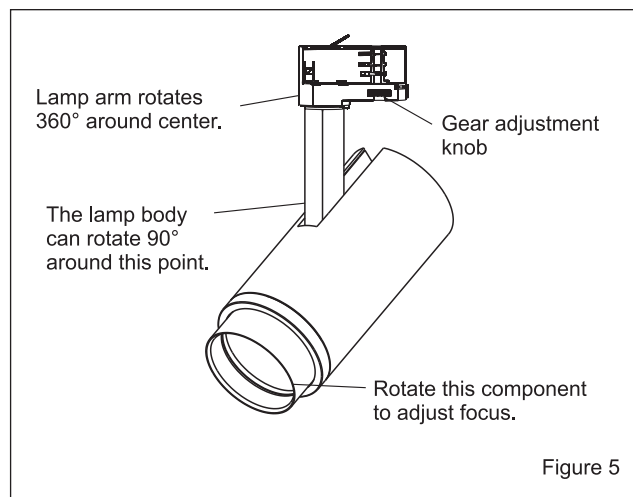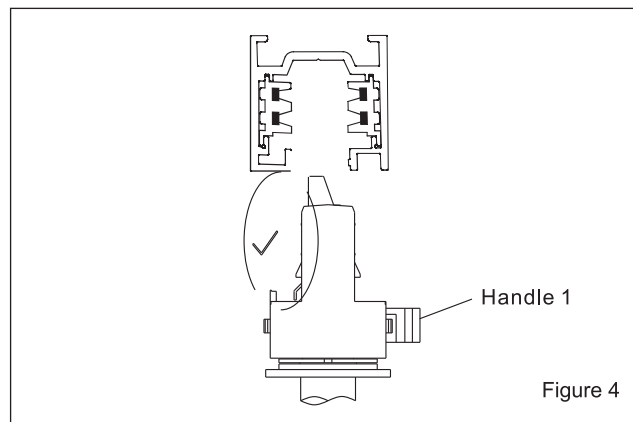

9. Maximum hanging load diagram (Figure 6).

